













Featherlite Trailer Inspection and Service Intervals					
ITEM	SERVICE REQUIRED	SERVICE INTERVAL			
		Before Each Use	Every 3 months	Every 6 months	Every Year
<b>AXLE ATTACHMENT BOLTS</b>					
	<i>Check by Featherlite dealer</i>				✓
<b>BREAKAWAY BRAKES</b>					
	<i>Check operation</i>	✓			
Breakaway Battery	<i>Fully charged, connections clean</i>	✓			
Breakaway Switch	<i>Test operation, connections clean</i>	✓			
<b>BRAKES, ALL TYPES</b>					
	<i>Check operation</i>	✓			
Shoes & Drums	<i>Adjust</i>	First 200 miles; Every 3,000 miles			
	<i>Check for scoring and wear</i>				✓
<b>BRAKES, ELECTRIC</b>					
Magnets	<i>Inspect for wear and current draw</i>	6 months or 6,000 miles			
Controller (in tow vehicle)	<i>Check for correct amperage &amp; modulation</i>	6 months or 6,000 miles			






**SALES DEPARTMENT**

563.547.6000  
toll free: 800.800.1230

fax: 563.547.6100  
www.fthr.com

Hwy. 63 & 9, P.O. Box 320  
Cresco, IA 52136

BRAKES, HYDRAULIC					
Master Cylinder	<i>Check fluid level &amp; replenish. Check for leaks/sticking</i>	12 months or 12.000 miles			
Brake Lines	<i>Inspect for cracks, leaks and kinks</i>	12 months or 12.000 miles			
Vacuum Actuated	<i>Check gauge for proper vacuum of 18 in. HG</i>				
Air Pressure Actuated	<i>Inspect for cracks, leaks and kinks</i>	12 months or 12.000 miles			
Electric Actuated	<i>Verify operation / inspect</i>	12 months or 12.000 miles			
COUPLERS, BALLS, PINS					
Coupler & Hitch Ball	<i>Check for cracks, pits, flats. Replace with ball having GVW. Grease. Check locking device &amp; replace when worn</i>				
Gooseneck Ball	<i>Check for cracks, pits, flats. Replace with ball having GVW. Grease. Check locking device &amp; replace when worn</i>				
Fifth Wheel & Pin	<i>Grease. Replace when worn.</i>				
Jack, Drop Leg	<i>Grease gears at top</i>				
LIGHTS & SIGNALS					
	<i>Check for proper operation. Verify connection is clean and tight.</i>				
STRUCTURE					
RUBBER MATS & FLOOR	<i>Remove mats and wash both sides. Wash floor.</i>				
HINGES, DOORS & DIVIDERS	<i>Inspect. Repair or replace damaged, worn or broken parts.</i>				
FRAME MEMBERS	<i>Inspect all frame members, bolts and rivets. Repair or replace damaged, worn or broken parts.</i>				
Welds	<i>Inspect all welds. Repair as needed</i>				

Slide-out	<i>Clean dirt build-up. Lubricate slides, shafts and gear</i>				
Roof Vents	<i>Clean dirt build-up. Lubricate hinges.</i>				
Windows	<i>Clean dirt build-up. Lubricate window slides</i>				
<b>TIRES</b>					
	<i>Check tire pressure when cold. Inflate as needed</i>				
	<i>Rotate Tires</i>	Every 5,000 miles			
	<i>Inspect treads and sidewalls thoroughly. Replace tire when treads are worn or a sidewall has a bulge</i>				
<b>WHEELS</b>					
Bearings (Hubs) Sealed	<i>Check for free running / replace (not serviceable)</i>	Every 12.000 miles or one year			
Bearings (Hubs) Unsealed	<i>Disassemble. Inspect. Assemble and repack</i>	Every 12.000 miles or one year. If immersed in water, replace bearing before next use.			
LUG BOLTS & HUB	<i>Check and tighten</i>	Check for tightness before every use. Check torque after first 10, 25 and 50 miles; after any impact; annually; and at start of towing season			
RIMS	<i>Inspect for cracks and dents. Replace as needed</i>	After any impact or every year			